

COOL BOOST WATER METHANOL SYSTEMS AUXILIARY OUTPUT WIRING

OPTION 1 - BOOST SAFE OUTPUT METHOD 1 **METHOD 2** AUTOMOTIVE TO COIL/S 12V+ **12V DC RELAY** MENU SELECTION (V2 CONTROLLERS ONLY!) TO BOOST CONTROLLER **SCRAMBLE INPUT WIRE** OFF FROM FUSE BOX FLASHING OG TAPE UP WIRE ON OR OR NOTE SET THE BOOST CONTROLLER TO SCRAMBLE TO 0% DUTY CYCLE TO REDUCE THE BOOST PRESSURE TO ACTUATOR PRESET FROM CONTROLLER HARNESS **OPTION 2 - SYSTEM STATUS OUTPUT LED (MIMIC) FLASH MATRIX** - SYSTEM ACTIVE INJECTION STEADY ON **MENU SELECTION** (V2 CONTROLLERS ONLY!) OFF SINGLE FLASH - BLOCKED NOZZLE WARNING FLASHING OFF FLUID LEVEL LOW **DOUBLE FLASH** LOW PRESSURE INTERLOCK **CONTINUOUS FLASHING HARDWARE FAILURE COLOUR ABBREVIATIONS BK - BLACK** OG - ORANGE RD - RED **BU - BLUE** BN - BROWN WH - WHITE YL - YELLOW GN - GREEN GY - GREY

PLEASE NOTE

IN ORDER TO SWITCH BETWEEN THE BOOST SAFE (DEFAULT) AND STATUS OUTPUT OPTIONS ABOVE, THE CONTROLLER WILL REQUIRE TO BE CONFIGURED IN THE MENU (PLEASE SEE THE CONTROLLER MANUAL)